

PRECONDITIONS FOR INSTALLATION – FLAMINGO

ROOM

- Equipment is designed for use in indoor conditions. The room, where the equipment is used should be moisture proof.
- Ventilation is recommended, as in the working regime the machine creates humidity.
- It is recommended to have a general drain on a floor.
- For installation of Flamingo the room must be at least 2500 mm high and 2500 mm wide.
- On the illustration areas A and B are the best suitable places for connections (Figure 1).
- Doorway width must be at least 80 cm

POWER

- Power cord material at least **3 x 2,5 mm²** copper crosscut.
- Power cord should be connected into the moisture proof junction box which is located on the equipment frame.
- Maximum power consumption for equipment at a time is **4,4kW**.
- Protective device current in front of equipment feeder not less than **20A** Refer to area (A) on illustration (Figure 1).

WATER

WATER CONNECTION

- 2 water pressure hoses are required one for hot, another for cold water with one ending being ½ threaded. Refer to area (inside area B on illustration) on illustration (Figure 1)
- Length of hoses depend upon the distance from the water inlets.
- Steam generator do not work without warm water inlet.

DRAINAGE

- Drainage connection on the floor should be at least Ø 32 mm;
- Water drainage hose should be of Ø 32 mm
- Length of drainage hose depending on the distance from drainage opening on the ground ground (inside area B on illustration)(Figure 1).



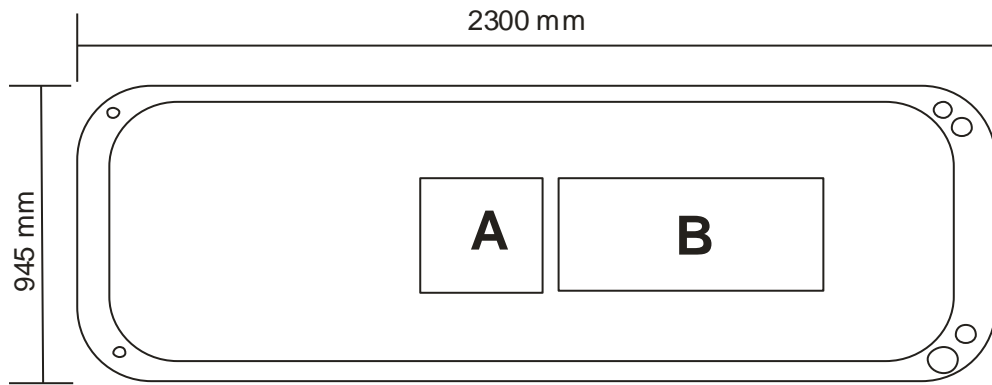


Figure 1

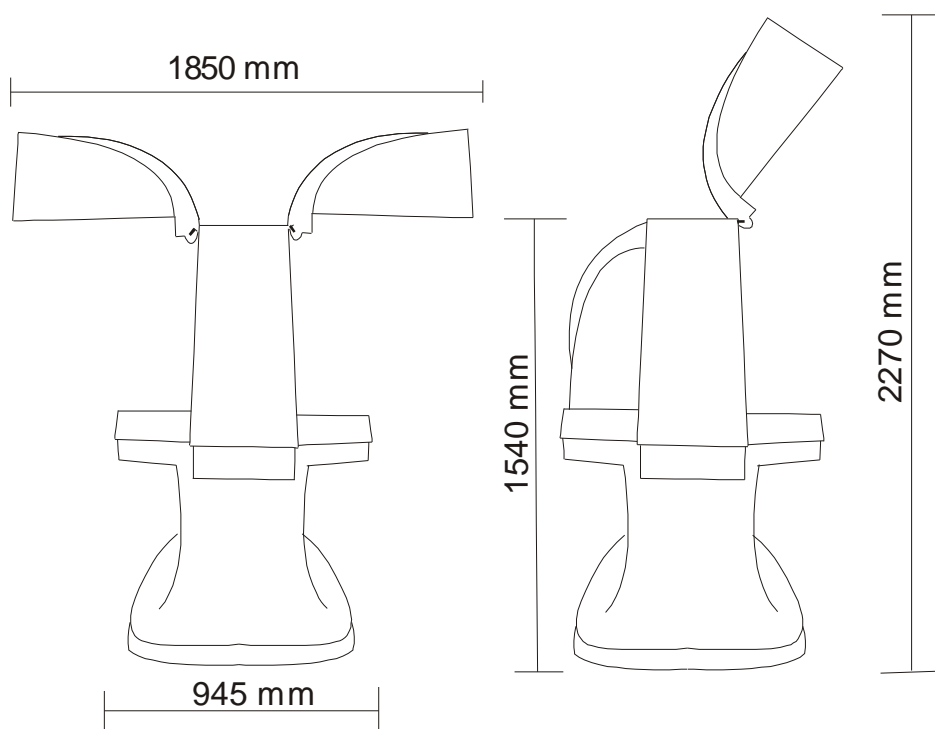

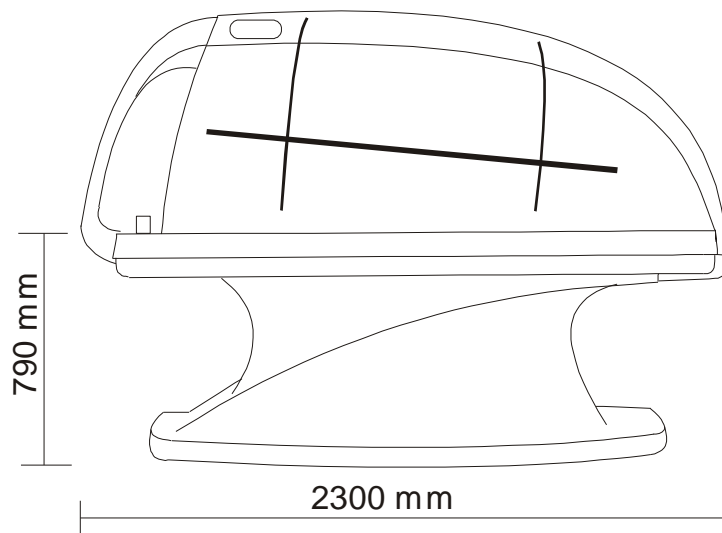

Electric Connection

Electric installations of NeoQi® Harmony equipment should be carried out by qualified specialists or official representative of NeoQi® AS.

NeoQi® Harmony is CLASS I EQUIPMENT in which protection against electric shock does not rely on BASIC INSULATION only, but which includes an additional safety precaution in that means are provided for the connection of the EQUIPMENT to the protective earth conductor in the fixed wiring of the installation in such a way that accessible metal parts cannot become live in the event of a failure of the basic insulation.

NeoQi® Harmony is TYPE B EQUIPMENT, providing a particular degree of protection against electrical shock, particularly regarding:

- allowable leakage current (10 mA);
- reliability of the protective earth connection.

NeoQi® Harmony equipment is not suitable for use in the presence of a FLAMMABLE ANAESTHETIC MIXTURE WITH AIR or WITH OXYGEN OR NITROUS OXIDE.

Water Connections

Warm and cold water inlets and drainage connections of NeoQi® Harmony equipment should be carried out by qualified specialist or official representative of NeoQi® AS.

For proper functioning of equipment only **clean** tap water should be used. In case the tap water contains high percentage of abrasive substances or rust, it is recommended to install a water filter.