

Instruction Manual

Affinity Stellar Beauty/Tattoo Chair

AFSTELLAR/BLK or AFSTELLAR/W



Table of Contents

1. Specifications
2. User Instructions
3. Upholstery Care
4. Maintenance & Safety

Specifications


Removable Head
Pillow/Breathe Hole
Bung



Backrest Hand Lever




Removable Arm Rests



Seat Angle Adjuster
Lever



Leg Rest Hand Lever



Leg Rest Hand Lever



Hydraulic height
adjust assembly



Weighted Base



Adjustable Feet




Pull Out Leg Extenders



Continued ...

Specifications

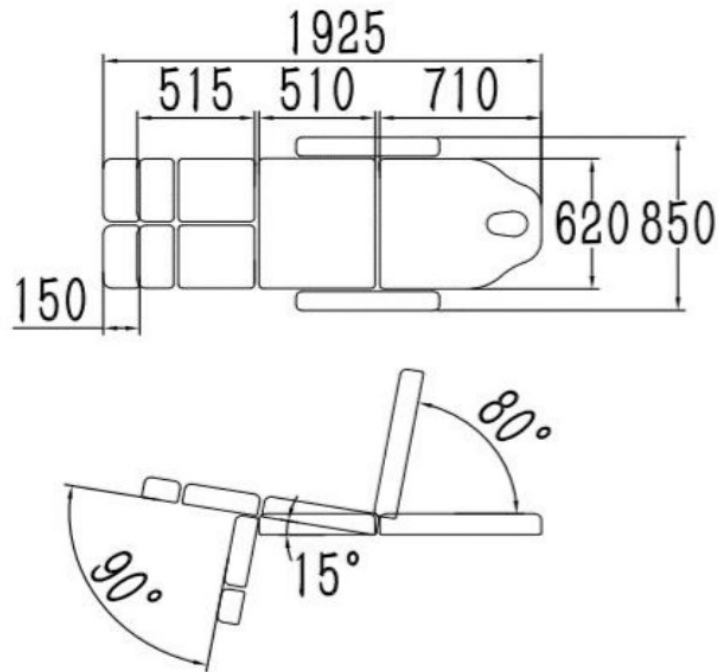

Height Adjustment:	24" (61cm) to 30.5" (77cm)
Weight (approx.):	50Kgs
Set up Dimensions:	Length (flat): 74-76" (188-193cm), Length (seated): 56" (142cm). Width: 24.5" (62cm), Width (with arm rests) 33.5" (85cm)
Materials:	Steel, 4" Semi firm Therafoam padding, PU
Lifting Capacity:	200kgs (31.5 stones)
Warranty:	2 years
Includes:	Adjustable foot extenders, removable side arm rests, removable pillow/plug. 
Colour:	Black White
Shipping W&Ds (approx):	L 130cm x W70cm x H80cm (not incl. pallet), Gross weight: 52kg

Instructions

How to adjust the height:

The chair height can be easily adjusted using the foot pedal.



Gentle presses, in quick succession, on the foot pedal will engage the hydraulics and raise the chair.

To lower the chair, press down on the pedal and hold for a moment. The chair will slowly lower.

How to rotate the chair:

The chair top can be rotated through 360°



Once in desired position, lift the foot pedal to lock the top into place.

Instructions

How to tilt the seat:

For added comfort and positioning options, the couch top/seat can be adjusted up and down through 15°.

To operate, lift the seat angle adjuster lever.



With the lever depressed, gently push down or pull up the head end of the seat until you have the Required angle.



How to lower and raise the leg sections:

Each leg can be independently positioned.



To operate, pull the lever towards the cushion pad and gently raise or lower to the desired position. To lock into place, remove your hand from the lever.



Instructions

How to insert/remove the arm rest:


With a hand at either end, gently guide the prongs into/out of the locator holes in the side of the chair.



How to extend the leg sections:



With a hand at either edge of the foot panel, gently pull it towards you until you have reached the desired position.

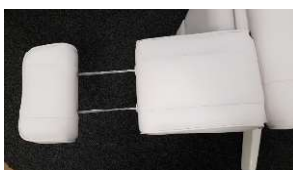

To return to original position, gently push the extension back towards the chair.



Balancing the chair:

Although we don't recommend using on an uneven surface, the 4 feet each has a small amount of adjustment for balancing. Simply turn the foot in a clockwise direction to allow a couple of mm adjustment.



Accessing the breathe hole:

The breathe hole can be found underneath the head cushion. To access the breathe hole, simply lift the cushion.



Upholstery Care

Upholstery Care:

It is a known fact that upholstery will deteriorate over time. A good care routine will help you get the best out of your chair for the longest period.

Here are our tips to help safeguard against premature ageing:

- Avoid storing your chair in extreme cold temperatures as excessive coldness will cause cracking.
- Avoid storing or using your chair in or near extreme heat. The heat from heaters, electrical appliances or direct sunlight can cause the fabric to stretch and pucker, and eventually start to peel.
- If you are using sharp objects during your practice, such as needles, make sure you have a protective layer over the table. Laying a towel or blanket over your chair can help prevent any scratching or puncturing of the upholstery.
- As the oils found naturally on our skin can break down upholstery, it is important that you clean your upholstery fabric every day using a mild detergent (avoiding anti-bac and citrus). This will help to protect against oil stains and dirtiness which will cause cracking and permanent stains over time. Common practise is to mix a little detergent with warm water in a spray bottle. Spray the mixture onto the table and gently wipe over with a soft cloth. Rinse and pat dry. Take care to include face cradle cushions, carry handles and inside the breathe hole as well as the main couch surface.

CAUTION:

- Due to the drying nature of alcohol, wiping upholstery with alcohol can dry out the vinyl and cause it to crack. Aromatherapy oils and natural body oils can also be very aggressive in nature and attack the upholstery.

Safety/Maintenance

Safety/Maintenance:

Please read this instruction manual before operating this product.

Follow these safeguards to ensure proper use of the equipment and to help prevent injury and material damage.

Please check the padding and upholstery when unpacking the chair. Do not use if there is any sign of damage. Our warranty does not cover the damages caused by improper set-up, accident or abuse.

Use this equipment only for its intended purpose or as described in this manual.

Do not expose the equipment to extreme temperature or humidity.

The chair cannot be fully rotated with the leg sections fully down as they will not clear the base.

To protect the hydraulic system, when not in use, the chair should be placed in the lowest position.

Do not sit directly on the head or feet end of chair or armrest.

We recommend checking all moving parts on a regular basis.

In the case of safety-relevant signs of wear contact your original retailer.

Unauthorised modification or alteration of this couch is prohibited and will void the warranty.



Thank you for choosing Affinity.

Every care has been taken to ensure that this product reaches you in excellent working condition.

Should you have any questions or concerns please refer back to your original supplier who will be happy to assist.